

Changing your Bulb

- ① Disconnect your light from the power and allow 30 minutes for everything to cool down. To access the bulb cavity, simply unscrew the front ribbed shade by rotating anti-clockwise (Diagram 4).
- ② Remove protective rubber shroud and bulb spacer (Diagram 5).
- ③ Pull out the old bulb (avoid twisting).
- ④ Insert the new bulb by pushing the two male pins into the female bulb holder socket.
- ⑤ Replace the bulb spacer and rubber shroud.
- ⑥ Replace the front cover by screwing on to the lamp head.
- ⑦ Warning – use only approved bulbs.



Contact us

If you require any assistance or spare bulbs, please call +44 (0)1296 390390
(Mon-Fri 8:30 to 17:30)

alex varifocus
for serious readers



Getting Started

Turn the light on or off using the On/Off switch on the back of the light head (inset diagram 1).



Adjusting Your Beam

In addition, incorporating our very latest LED light engine technology, the light head can be adjusted independently to change the beam width. By simply gently pulling the bulb lens you can adjust the beam from a wider area to a narrow, more concentrated spot (diagram 3).

Standby Mode

It is normal to leave the light on standby when not in use. When in standby mode it will consume less than 0.5w.

Warranty

Your light has a full 5 year warranty. It is not designed to be opened so please do not attempt to tamper with it.

Positioning

Your light has been designed to allow you to easily direct the light pattern just where you need it.

It is equipped with a swivel joint at the lamp head for fine positioning (inset diagram 2) and robust flexible stay-put arm with a lifetime guarantee.

