

Changing your Bulb

- ① Disconnect your light from the power. If the light has been on recently, allow 30 minutes for everything to cool down. To access the bulb cavity unscrew the ribbed front section by rotating anti-clockwise (diagram 4).
- ② Pull out the old two pinned bulb without twisting. Insert the new bulb by pushing the two male pins into the two female holder sockets.
- ③ Replace the front shade by screwing it back on to the lamp head.



Contact us

If you require any assistance or spare bulbs, please call +44 (0)1296 390390 (Mon-Fri 8:30 to 17:30)



Alex Rechargeable

Getting Started

Your Alex Light is ready to plug in and use.

To operate the light, use the on/off switch located on the head of the light (Diagram 1).

Your on/off switch will have a 0/1 marking on it. The rechargeable light is only available in a non-dimmable format.

Positioning



Your light is designed to help you easily direct the beam just where you need it. It is equipped with a swivel joint at the lamp head and a robust, flexible, stay-put arm for fine positioning.

Recharging

The light is delivered fully charged and provides a minimum of 4 hours continuous use. There will be no loss of light output as the battery charge drops.

The light can be recharged using the supplied power unit. The charging point is located on the base of the light (see A of diagram 2). Whilst charging a red light is visible on the charger. Once fully charged this light reverts to green (see B of diagram 2). The recharging time varies from 90 to 120 minutes.

The light can only be used indoors.

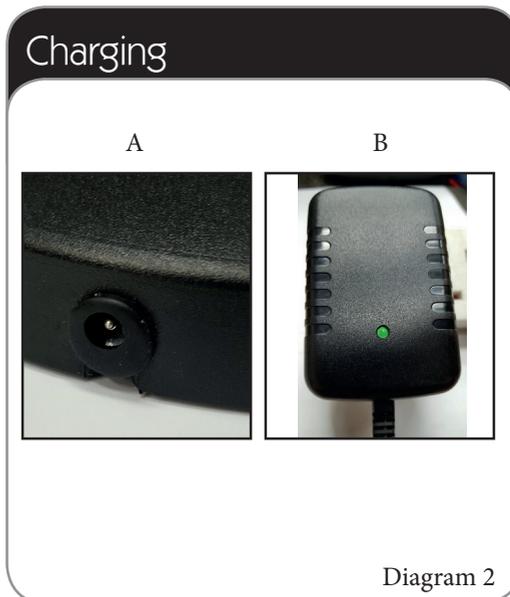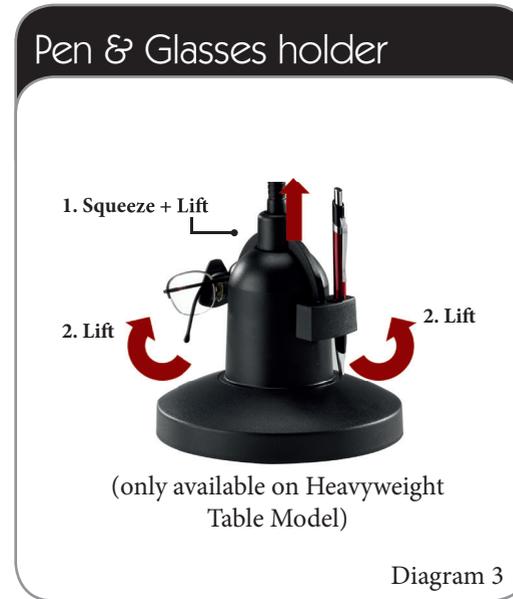

Standby Mode

The Alex Light is not designed to be opened so please do not attempt to tamper with it. It is normal to leave the light on standby when not in use. When in standby mode it will consume less than 0.5w.

Table Accessories

The table model is equipped with pen and glasses holders. These can be removed if you wish. The retaining cap releases if squeezed and lifted.

If it seems a little stiff you can loosen it by gently levering the two plastic arms on either side together. Once the retaining cap has been released, remove one or both holders then push the cap back into place (Diagram 3).